

## Ersatzteilliste EFA 805

Spare Part List EFA 805 Art.-Nr. 100 280 050 64 789 010-02



Gemäss Explosionszeichnung EFA 805 / in accordance with exploded drawing EFA 805

Pos.	Me.	Bezeichnung	Art.-Nr.	Pos.	Me.	Bezeichnung	Art.-Nr.			
<b>H0</b>	<b>1</b>	<b>Handgriff kpl. / Handle cpl.</b>	<b>H3 - H16</b>	<b>001 789 022</b>	<b>64 789 022</b>	L17	1	Ventilfeder / valve spring	001 974 526	64 781 270
H2	1	Handgriff bedruckt / handle printed		001 789 122	64 789 122	L18	1	O-Ring / O-ring	001 974 642	64 780 105
H4	1	DU-Bundbuchse / flange bushing		001 974 631	64 780 170	L19	1	Schlauchtülle / hose bush	001 974 669	64 789 400
H5	2	Lagerring / bearing ring		001 974 632	64 780 190	L20	1	Gummi-Puffer / rubber	001 974 643	64 780 106
H7	1	Führung EFA805 / guide EFA805		001 788 820	64 788 820	L21	1	Gewindestift / threaded pin	001 324 904	
H10	1	Halter / holder		001 789 185	64 789 185	D22	1	Bedienungshebel / control lever	001 974 626	64 789 220
H12	1	Zyl.-Schraube / screw		001 780 203	64 780 203	D23	1	Spiral Spannstift / clamping pin	001 974 604	64 780 141
H13	2	O-Ring / O-ring		001 974 630	64 780 101	D24	1	Sperre / blocker	001 974 627	64 789 230
H14	1	Abblasventil / draining tap		001 974 638	64 789 200	D25	1	Spiral Spannstift / clamping pin	001 974 603	64 780 140
H15	1	Zyl.-Schraube / screw		001 974 634	64 780 200	D26	1	Biegefeder / bending spring	001 974 605	64 780 160
H16	1	Gewindestift / threaded pin		001 327 704	64 780 240	D28	1	Druckfeder / spring	001 780 163	64 780 163
<b>M0</b>	<b>1</b>	<b>Motor kpl. / engine cpl.</b>	<b>M2 - M12</b>	<b>008 014 729</b>		D29	1	O-Ring / O-ring	001 974 601	64 780 100
M2	1	Motorgehäuse / engine housing		001 974 659	64 789 271	D30	1	Stössel /plunger	001 974 628	64 789 260
M3	2	Kolbenstangenlager / piston rod bearing		001 974 426	64 786 319	D32	1	Schlauch kpl. / hose cpl.	001 781 752	64 781 752
M4	1	Zylindereinsatz / cylinder insert		001 974 508		D34	1	Schlauchklemme / hose clip	001 974 422	64 784 240
M5	1	O-Ring / O-ring		001 974 652	64 780 103	D37	1	Abluftschlauch / exhaust hose	001 974 423	64 788 710
<b>M6</b>	<b>1</b>	<b>Zylinder kpl. / Cylinder cpl</b>	<b>M6-1 – M6-2</b>	<b>001 974 657</b>	<b>64 789 030</b>	D42	1	Schild / label	001 788 816	64 788 816
M6-1	2	Zylinderstift / pin		001 974 672	64 780 142	D43	1	Arretierung / lock	001 974 625	64 789 190
M6-2	1	Buchse / bush		001 974 671	64 789 160					
M7	1	Kolben kpl. / piston cpl.		007 013 400						
M8	1	Zwischenplatte / plate		001 974 660	64 789 290					
M9	1	Steuerschieber / slide valve		001 974 670	64 781 240					
M10	1	Steuergehäuse / control housing		001 974 661	64 789 300					
M11	1	Stift / pin		001 974 653	64 780 193					
M12	1	Schraube / screw		001 974 662	64 789 310					
<b>L0</b>	<b>1</b>	<b>Luftzufuhr kpl. / air supply cpl.</b>	<b>L1 – L21</b>	<b>001 789 060</b>	<b>64 789 060</b>	<b>Für Werkzeughalter</b>				
L1	1	Luftzufuhr / air supply		001 974 664	64 789 330	D50	1	Klemmschelle / collar	001 974 412	64 781 441
L2	1	Dichtung / seal		001 974 644	64 780 120	D51	1	Mutter / nut	001 974 413	64 781 461
L3	1	U-Scheibe / slice		001 974 645	64 780 135	D52	1	Schraube / screw	001 974 414	64 991 680
L4	1	Sicherungsring / lock ring		001 974 646	64 780 150					
L5	1	Stopfen / plug		001 974 665	64 789 390	D53	1	Drehmomentschlüssel / torque screw driver	001 788 300	64 788 300
L6	1	O-Ring / O-ring		001 974 601	64 780 100					
L7	1	Abluftventil / exhaust air valve		001 974 649	64 789 360					
L9	3	O-Ring / O-ring		001 974 630	64 780 101					
L10	1	O-Ring / O-ring		001 974 602	64 780 104					
L12	1	Abschlussschraube / cap screw		001 982 448	64 789 350					
L13	1	Deckel / cap		001 974 666	64 789 370					
L14	2	Zyl.-Schraube / screw		001 326 005	64 780 201					
L15	1	O-Ring / O-ring		001 974 641	64 780 102					
L16	1	Ventil / valve		001 974 668	64 789 382					

Index: 01

Explosionszeichnung EFA 805 / Exploded View EFA 805

Index: 01

