

Ersatzteilliste EFA 805

Spare Part List EFA 805 Art.-Nr. 100 280 050 64 789 010-02



Gemäss Explosionszeichnung EFA 805 / in accordance with exploded drawing EFA 805

Pos.	Me.	Bezeichnung	Art.-Nr.	Pos.	Me.	Bezeichnung	Art.-Nr.
H0	1	Handgriff kpl. / Handle cpl.	H3 - H16	001 789 022			64 789 022
H2	1	Handgriff bedruckt / handle printed		001 789 122			64 789 122
H4	1	DU-Bundbuchse / flange bushing		001 974 631			64 780 170
H5	2	Lagerring / bearing ring		001 974 632			64 780 190
H7	1	Führung EFA805 / guide EFA805		001 788 820			64 788 820
H10	1	Halter / holder		001 789 185			64 789 185
H12	1	Zyl.-Schraube / screw		001 780 203			64 780 203
H13	2	O-Ring / O-ring		001 974 630			64 780 101
H14	1	Abblasventil / draining tap		001 974 638			64 789 200
H15	1	Zyl.-Schraube / screw		001 974 634			64 780 200
H16	1	Gewindestift / threaded pin		001 327 704			64 780 240
M0	1	Motor kpl. / engine cpl.	M2 - M12	008 014 729			
M2	1	Motorgehäuse / engine housing		001 974 659			64 789 271
M3	2	Kolbenstangenlager / piston rod bearing		001 974 426			64 786 319
M4	1	Zylindereinsatz / cylinder insert		001 974 508			
M5	1	O-Ring / O-ring		001 974 652			64 780 103
M6	1	Zylinder kpl. / Cylinder cpl	M6-1 – M6-2	001 974 657			64 789 030
M6-1	2	Zylinderstift / pin		001 974 672			64 780 142
M6-2	1	Buchse / bush		001 974 671			64 789 160
M7	1	Kolben kpl. / piston cpl.		007 013 400			
M8	1	Zwischenplatte / plate		001 974 660			64 789 290
M9	1	Steuerschieber / slide valve		001 974 670			64 781 240
M10	1	Steuergehäuse / control housing		001 974 661			64 789 300
M11	1	Stift / pin		001 974 653			64 780 193
M12	1	Schraube / screw		001 974 662			64 789 310
L0	1	Luftzufuhr kpl. / air supply cpl.	L1 – L21	001 789 060			64 789 060
L1	1	Luftzufuhr / air supply		001 974 664			64 789 330
L2	1	Dichtung / seal		001 974 644			64 780 120
L3	1	U-Scheibe / slice		001 974 645			64 780 135
L4	1	Sicherungsring / lock ring		001 974 646			64 780 150
L5	1	Stopfen / plug		001 974 665			64 789 390
L6	1	O-Ring / O-ring		001 974 601			64 780 100
L7	1	Abluftventil / exhaust air valve		001 974 649			64 789 360
L9	3	O-Ring / O-ring		001 974 630			64 780 101
L10	1	O-Ring / O-ring		001 974 602			64 780 104
L12	1	Abschlusschraube / cap screw		001 982 448			64 789 350
L13	1	Deckel / cap		001 974 666			64 789 370
L14	2	Zyl.-Schraube / screw		001 326 005			64 780 201
L15	1	O-Ring / O-ring		001 974 641			64 780 102
L16	1	Ventil / valve		001 974 668			64 789 382
L17	1	Ventilfeder / valve spring					001 974 526 64 781 270
L18	1	O-Ring / O-ring					001 974 642 64 780 105
L19	1	Schlauchtülle / hose bush					001 974 669 64 789 400
L20	1	Gummi-Puffer / rubber					001 974 643 64 780 106
L21	1	Gewindestift / threaded pin					001 324 904
D22	1	Bedienungshebel / control lever					001 974 626 64 789 220
D23	1	Spiral Spannstift / clamping pin					001 974 604 64 780 141
D24	1	Sperre / blocker					001 974 627 64 789 230
D25	1	Spiral Spannstift / clamping pin					001 974 603 64 780 140
D26	1	Biegefeder / bending spring					001 974 605 64 780 160
D28	1	Druckfeder / spring					001 780 163 64 780 163
D29	1	O-Ring / O-ring					001 974 601 64 780 100
D30	1	Stössel /plunger					001 974 628 64 789 260
D32	1	Schlauch kpl. / hose cpl.					008 013 337
D34	1	Schlauchklemme / hose clip					001 974 422 64 784 240
D37	1	Abluftschlauch / exhaust hose					001 974 423 64 788 710
D42	1	Schild / label					001 788 816 64 788 816
D43	1	Arretierung / lock					001 974 625 64 789 190
Für Werkzeughalter							
D50	1	Klemmschelle / collar					001 974 412 64 781 441
D51	1	Mutter / nut					001 974 413 64 781 461
D52	1	Schraube / screw					001 974 414 64 991 680
D53	1	Drehmomentschlüssel / torque screw driver					001 788 300 64 788 300

Index: 02

Explosionszeichnung EFA 805 / Exploded View EFA 805

Index: 02

