

Ersatzteilliste EFA 805

Spare Part List EFA 805 Art.-Nr. 100 280 050 64 789 010-02



Gemäss Explosionszeichnung EFA 805 / in accordance with exploded drawing EFA 805

Pos.	Me.	Bezeichnung	Art.-Nr.	Pos.	Me.	Bezeichnung	Art.-Nr.
H0	1	Handgriff kpl. / Handle cpl. H3 - H16	001 789 022 64 789 022	L17	1	Ventilfeder / valve spring	001 974 526 64 781 270
H2	1	Handgriff bedruckt / handle printed	001 789 122 64 789 122	L18	1	O-Ring / O-ring	001 974 642 64 780 105
H4	1	DU-Bundbuchse / flange bushing	001 974 631 64 780 170	L19	1	Schlauchtülle / hose bush	001 974 669 64 789 400
H5	2	Lagerring / bearing ring	001 974 632 64 780 190	L20	1	Gummi-Puffer / rubber	001 974 643 64 780 106
H7	1	Führung EFA805 / guide EFA805	001 788 820 64 788 820	L21	1	Gewindestift / threaded pin	001 324 904
H10	1	Halter / holder	001 789 185 64 789 185	D22	1	Bedienungshebel / control lever	001 974 626 64 789 220
H12	1	Zyl.-Schraube / screw	001 780 203 64 780 203	D23	1	Spiral Spannstift / clamping pin	001 974 604 64 780 141
H13	2	O-Ring / O-ring	001 974 630 64 780 101	D24	1	Sperre / blocker	001 974 627 64 789 230
H14	1	Abblasventil / draining tap	001 974 638 64 789 200	D25	1	Spiral Spannstift / clamping pin	001 974 603 64 780 140
H15	1	Zyl.-Schraube / screw	001 974 634 64 780 200	D26	1	Biegefeder / bending spring	001 974 605 64 780 160
H16	1	Gewindestift / threaded pin	001 327 704 64 780 240	D28	1	Druckfeder / spring	001 780 163 64 780 163
M0	1	Motor kpl. / engine cpl. M2 - M12	008 014 729	D29	1	O-Ring / O-ring	001 974 601 64 780 100
M2	1	Motorgehäuse / engine housing	001 974 659 64 789 271	D30	1	Stössel /plunger	001 974 628 64 789 260
M3	2	Kolbenstangenlager / piston rod bearing	001 974 426 64 786 319	D32	1	Schlauch kpl. / hose cpl.	008 013 337
M4	1	Zylindereinsatz / cylinder insert	001 974 508	D34	1	Schlauchklemme / hose clip	001 974 422 64 784 240
M5	1	O-Ring / O-ring	001 974 652 64 780 103	D37	1	Abluftschlauch / exhaust hose	001 974 423 64 788 710
M6	1	Zylinder kpl. / Cylinder cpl M6-1 – M6-2	001 974 657 64 789 030	D42	1	Schild / label	001 788 816 64 788 816
M6-1	2	Zylinderstift / pin	001 974 672 64 780 142	D43	1	Arretierung / lock	001 974 625 64 789 190
M6-2	1	Buchse / bush	001 974 671 64 789 160				
M7	1	Kolben kpl. / piston cpl.	007 013 400				
M8	1	Zwischenplatte / plate	001 974 660 64 789 290				
M9	1	Steuerschieber / slide valve	001 974 670 64 781 240				
M10	1	Steuergehäuse / control housing	001 974 661 64 789 300				
M11	1	Stift / pin	001 974 653 64 780 193				
M12	1	Schraube / screw	001 974 662 64 789 310				
L0	1	Luftzufuhr kpl. / air supply cpl. L1 – L21	001 789 060 64 789 060	Für Werkzeughalter			
L1	1	Luftzufuhr / air supply	001 974 664 64 789 330	D50	1	Klemmschelle / collar	001 974 412 64 781 441
L2	1	Dichtung / seal	001 974 644 64 780 120	D51	1	Mutter / nut	001 974 413 64 781 461
L3	1	U-Scheibe / slice	001 974 645 64 780 135	D52	1	Schraube / screw	001 974 414 64 991 680
L4	1	Sicherungsring / lock ring	001 974 646 64 780 150				
L5	1	Stopfen / plug	001 974 665 64 789 390	D53	1	Drehmomentschlüssel / torque screw driver	001 788 300 64 788 300
L6	1	O-Ring / O-ring	001 974 601 64 780 100				
L7	1	Abluftventil / exhaust air valve	001 982 449 64 789 362				
L9	3	O-Ring / O-ring	001 974 630 64 780 101				
L10	1	O-Ring / O-ring	001 974 602 64 780 104				
L11	1	Abschlussschraube / cap screw	001 982 448 64 789 350				
L13	1	Deckel / cap	001 974 666 64 789 370				
L14	2	Zyl.-Schraube / screw	001 326 005 64 780 201				
L15	1	O-Ring / O-ring	001 974 641 64 780 102				
L16	1	Ventil / valve	001 974 668 64 789 382				

Index: 03

