

Ersatzteilliste PK-25
Spare Part List PK-25 Art.-Nr. 100 280 030



Gemäss Explosionszeichnung PK-25 / in accordance with exploded drawing PK-25

Pos.	Me.	Bezeichnung	Art.-Nr.	Pos.	Me.	Bezeichnung	Art.-Nr.
1	1	Distanzbrücke / Distance Spacer	003 013 236	16E02	1	Hülse / Bush	003 006 078
3A00	1	Schild kpl. / Protection Plate cpl. 3A01-3A02	007 013 234	16E03	1	Filter / Filter	003 006 078
3A01	1	Schild / Protection Plate	003 013 234	17A00	1	Motor kpl. / Engine cpl. 17A01-17D02	008 012 346
3A02	2	Schaftschraube / Shaft Screw	001 324 009	17A01	1	O-Ring / O-Ring	001 974 652 64 780 103
4	2	Gewindestift / Thread Pin	001 321 718	17A02	1	Doppel-Kolben / Double Piston	007 012 352
5	1	Kopfteil / Head Part	003 013 233	17A03	1	Umlenkplatte / Deflector Plate	003 012 169
6	1	Kopfmutter / Head Nut	003 012 321	17A04	1	Steuerschieber / Control Valve	001 974 670 64 781 240
7	1	Führung / Guide	003 013 235	17A05	1	Steuergehäuse / Control Box	001 974 661 64 789 300
8	1	Schraube / Screw	001 780 203	17A06	1	Stift / Pin	003 012 494
9A01	1	Handgriffgehäuse / Handle Case	003 012 319	17A07	1	Schraube / screw	001 974 662 64 789 310
9A02	1	Handgriffüberzug / Handle Coat	003 013 264	17B00	1	Motorgehäuse kpl. / Engine Box cpl. 17B01-17B03	007 012 170
10	1	Bundbuchse / Flange Bush	001 974 631 64 780 170	17B01	1	Motorgehäuse / Engine Box	003 012 170
11	1	Druckfeder / Spring	001 982 405 64 780 161	17B02	2	Kolbenstangenlager / Piston Rod Bearing	001 974 426 64 786 319
12	2	Lagerring / Bearing Ring	001 974 632 64 780 190	17B03	1	Pufferbegrenzer vorn / Front Bumper Limiter	003 012 330
13	1	Abluftschlauch / Exhaust Air Tube	001 974 423 64 788 710	17C00	1	Zylinder kpl. / Cylinder cpl. 17C01-17C03	007 012 172
14	1	Schlauchklemme / Tube Clamp	001 974 422 64 784 240	17C01	1	Zylinder / Cylinder	003 012 172
15A00	1	Schlauch kpl. / Tube cpl. 15A01-15A03	001 781 752 64 781 752	17C02	1	Zylinder Stift / Cylinder Pin	001 307 210
16A00	1	Ventilgehäuse kpl. / Valve Body cpl. 16A01-16E03	008 012 317	17C03	1	Zylinder Stift / Cylinder Pin	001 305 573 64 788 690
16A01	1	Dichtung / Gasket	001 974 451 64 780 121	17D00	1	Zwischenplatte kpl. / Inner Plate cpl. 17D01-17D02	008 012 373
16A02	1	Schlauchtülle / Hose Clip	001 974 669 64 789 400	17D01	1	Zwischenplatte / Inner Plate	003 012 171
16A03	1	Druckfeder / Spring	001 362 661	17D02	1	O-Ring / O-Ring	001 317 763 64 781 320
16A04	1	Kugel / bullet	001 342 804				
16A05	1	Spannhülse / Spring Pin	001 305 203				
16A06	1	O-Ring / O-Ring	001 317 782				
16A07	1	Dichtung / Gasket	001 974 644 64 780 120				
16A08	1	Unterlagsscheibe / Washer	001 974 645 64 780 135				
16A09	1	Sicherungsring / Snap Ring	001 974 646 64 780 150				
16A10	4	Gummipuffer / Rubber Bumper	001 974 643 64 780 106				
16A11	2	Gewindestift / Thread Pin	001 324 009				
16B00	1	Ventilgehäuse / Valve Body 16B01-16B02	007 012 317				
16B01	1	Ventilgehäuse / Valve Body	003 012 317				
16B02	1	Scheibe / Plate	003 013 049				
16C00	1	Ventilbolzen kpl. / Valve Pin cpl. 16C01-16C02	007 010 005				
16C01	1	Ventilbolzen / Valve Pin	003 010 005				
16C02	2	O-Ring / O-Ring	001 312 693				
16D00	1	Ventilhebel kpl. / Valve Control Lever cpl.	007 013 037				
16E00	1	Gewindenippel kpl. / Thread Fitting cpl. 16E01-16E03	007 009 474				
16E01	1	Gewindenippel / Thread Fitting	003 009 474				

Index: 01

Explosionszeichnung PK-25 / Exploded View PK-25

Index: 01

