

**Ersatzteilliste PK-25**  
**Spare Part List PK-25 Art.-Nr. 100 280 030**



Gemäss Explosionszeichnung PK-25 / in accordance with exploded drawing PK-25

Pos.	Me.	Bezeichnung	Art.-Nr.	Pos.	Me.	Bezeichnung	Art.-Nr.
1	1	Distanzbrücke / Distance Spacer	003 013 236	16E02	1	Hülse / Bush	003 006 078
<b>3A00</b>	<b>1</b>	<b>Schild kpl. / Protection Plate cpl. 3A01-3A02</b>	<b>007 013 234</b>	16E03	1	Filter / Filter	003 006 078
3A01	1	Schild / Protection Plate	003 013 234	<b>17A00</b>	<b>1</b>	<b>Motor kpl. / Engine cpl. 17A01-17D02</b>	<b>008 012 346</b>
3A02	2	Schaftschraube / Shaft Screw	001 324 009	17A01	1	O-Ring / O-Ring	001 780 103 64 780 103
4	2	Gewindestift / Thread Pin	001 321 718	17A02	1	Doppel-Kolben / Double Piston	007 012 352
5	1	Kopfteil / Head Part	003 013 233	17A03	1	Umlenkplatte / Deflector Plate	003 012 169
6	1	Kopfmutter / Head Nut	003 012 321	17A04	1	Steuerschieber / Control Valve	001 781 240 64 781 240
7	1	Führung / Guide	003 013 235	17A05	1	Steuergehäuse / Control Box	001 789 300 64 789 300
8	1	Schraube / Screw	001 780 203	17A06	1	Stift / Pin	003 013 019
9A01	1	Handgriffgehäuse / Handle Case	003 012 319	17A07	1	Schraube / screw	001 789 310 64 789 310
9A02	1	Handgriffüberzug / Handle Coat	003 013 264	<b>17B00</b>	<b>1</b>	<b>Motorgehäuse kpl. / Engine Box cpl. 17B01-17B03</b>	<b>007 012 170</b>
10	1	Bundbuchse / Flange Bush	001 780 170 64 780 170	17B01	1	Motorgehäuse / Engine Box	003 012 170
11	1	Druckfeder / Spring	001 780 161 64 780 161	17B02	2	Kolbenstangenlager / Piston Rod Bearing	001 786 319 64 786 319
12	2	Lagerring / Bearing Ring	001 780 190 64 780 190	17B03	1	Pufferbegrenzer vorn / Front Bumper Limiter	003 012 330
13	1	Abluftschlauch / Exhaust Air Tube	001 788 710 64 788 710	<b>17C00</b>	<b>1</b>	<b>Zylinder kpl. / Cylinder cpl. 17C01-17C03</b>	<b>007 012 172</b>
14	1	Schlauchklemme / Tube Clamp	001 784 240 64 784 240	17C01	1	Zylinder / Cylinder	003 012 172
<b>15A00</b>	<b>1</b>	<b>Schlauch kpl. / Tube cpl.</b>	<b>008 013 337</b>	17C02	1	Zylinder Stift / Cylinder Pin	001 307 210
<b>16A00</b>	<b>1</b>	<b>Ventilgehäuse kpl. / Valve Body cpl. 16A01-16E03</b>	<b>008 012 317</b>	17C03	1	Zylinder Stift / Cylinder Pin	001 788 690 64 788 690
16A01	1	Dichtung / Gasket	001 780 121 64 780 121	<b>17D00</b>	<b>1</b>	<b>Zwischenplatte kpl. / Inner Plate cpl. 17D01-17D02</b>	<b>008 012 373</b>
16A02	1	Schlauchtülle / Hose Clip	001 789 400 64 789 400	17D01	1	Zwischenplatte / Inner Plate	003 012 171
16A03	1	Druckfeder / Spring	001 362 661	17D02	1	O-Ring / O-Ring	001 781 320 64 781 320
16A04	1	Kugel / bullet	001 342 804				
16A05	1	Spannhülse / Spring Pin	001 305 203				
16A06	1	O-Ring / O-Ring	001 317 782				
16A07	1	Dichtung / Gasket	001 780 120 64 780 120				
16A08	1	Unterlagsscheibe / Washer	001 780 135 64 780 135				
16A09	1	Sicherungsring / Snap Ring	001 780 150 64 780 150				
16A10	4	Gummipuffer / Rubber Bumper	001 780 106 64 780 106				
16A11	2	Gewindestift / Thread Pin	001 324 009				
<b>16B00</b>	<b>1</b>	<b>Ventilgehäuse / Valve Body 16B01-16B02</b>	<b>007 012 317</b>				
16B01	1	Ventilgehäuse / Valve Body	003 012 317				
16B02	1	Scheibe / Plate	003 013 049				
<b>16C00</b>	<b>1</b>	<b>Ventilbolzen kpl. / Valve Pin cpl. 16C01-16C02</b>	<b>007 010 005</b>				
16C01	1	Ventilbolzen / Valve Pin	003 010 005				
16C02	2	O-Ring / O-Ring	001 312 693				
<b>16D00</b>	<b>1</b>	<b>Ventilhebel kpl. / Valve Control Lever cpl.</b>	<b>007 013 037</b>				
<b>16E00</b>	<b>1</b>	<b>Gewindenippel kpl. / Thread Fitting cpl. 16E01-16E03</b>	<b>007 009 474</b>				
16E01	1	Gewindenippel / Thread Fitting	003 009 474				

Index: 04

Explosionszeichnung PK-25 / Exploded View PK-25

Index: 04

