


Appendix 3: Connection of the remote control with a cable

Connection and disconnection of the remote control with a cable can be done with **IMPULSATOR-2 AAB** turned on.

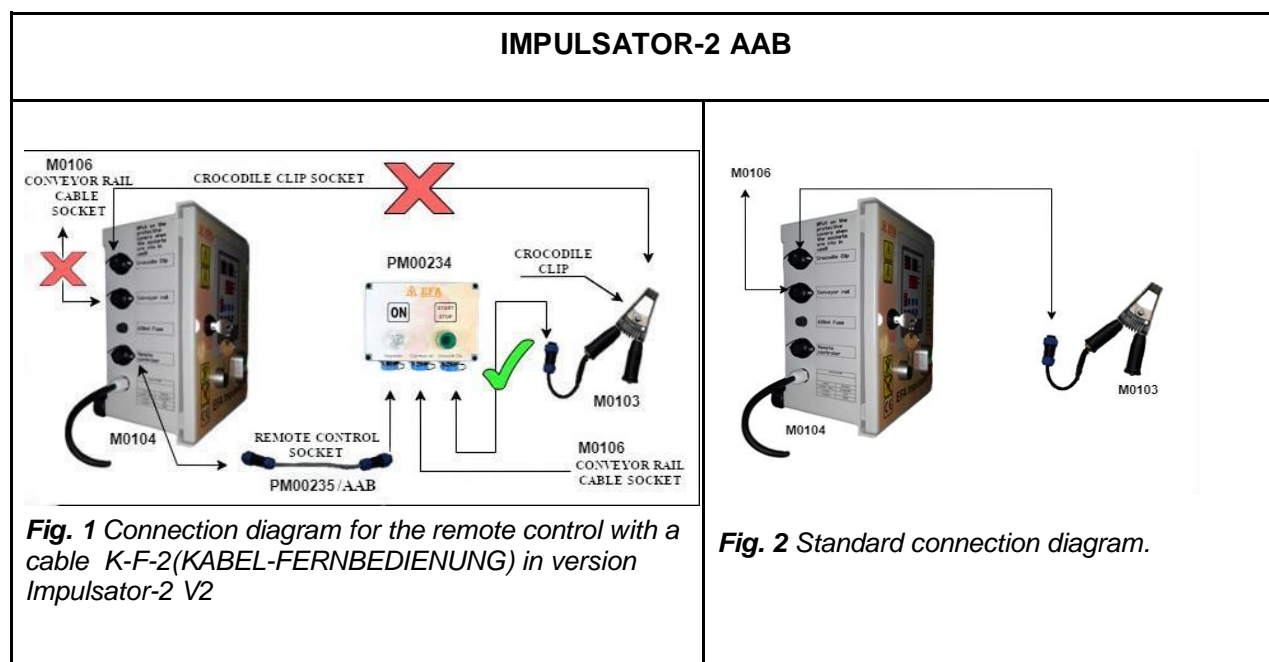

1. Remote control **K-F 2** should be connected to the socket located on the side wall of **IMPULSATOR-2 AAB** using the **PM00235 AAB (9pin)** cable;



CAUTION!

Connecting the remote control with a cable to **IMPULSATOR-2** will not deactivate the **START/STOP** button on the device. The standard crocodile clip socket will be disconnected automatically. For electrostimulation with the remote control the crocodile clip has to be connected to the socket on the remote control.

2. Crocodile clip should be connected to the socket located on the remote control using **M0103**;
3. Signal lights:



- white light - **POWER**
- illuminated **START/STOP** button - **ELECTROSTIMULATION**



CAUTION!

The signal lights and buttons will work when connected to **IMPULSATOR-2**
AAB